


PUL CONEKT CONTROLLER CARTRIDGE INSTRUCTIONS


WARNING: IT IS IMPERATIVE THAT THE PUMP IS TURNED OFF AND THE SYSTEM HAS BEEN DEPRESSURIZED PRIOR TO REMOVAL OF BAND CLAMPS FROM THE CONEKT CONTROLLER AND CONEKT 8-PORT VALVE. DO NOT STAND OVER THE VALVE. FAILURE TO DO SO MAY CAUSE BODILY INJURY, DEATH, OR DAMAGE TO VALVE.

INSTALL CONEKT CONTROLLER CARTRIDGE


Unscrew the band clamp from top of controller and insert the cartridge into the controller body. The controller cartridge fits in only one way.

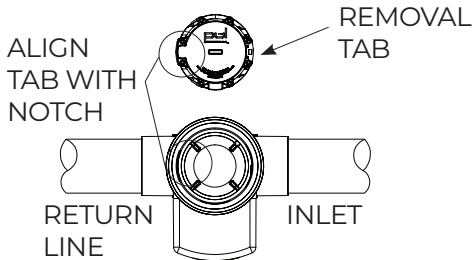

THE TAB ON TOP OF THE CARTRIDGE LINES UP WITH THE NOTCH ON THE RETURN SIDE OF THE CONTROLLER BODY.

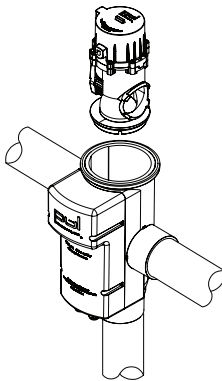


INSERT CARTRIDGE

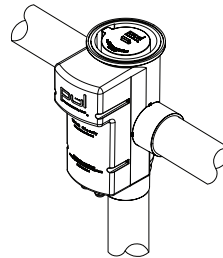

PRESS FIRMLY IN PLACE UNTIL CARTRIDGE IS FLUSH WITH THE BODY

APPLY GASKET LUBRICANT HERE IF NECESSARY

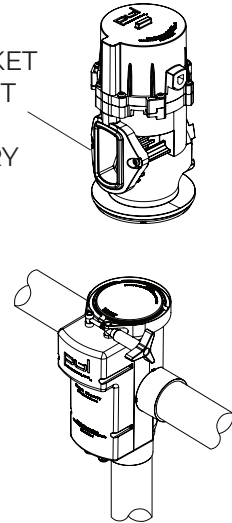

REPLACE LID AND TIGHTEN BAND CLAMP